



## CODESYS OPC UA Client SL

An extension for CODESYS SoftPLC systems for data exchange with OPC UA servers.

### Product description

The CODESYS OPC UA Client can be used to connect to any OPC UA servers and exchange data with them. The client provides an API to connect to an OPC UA server and execute the different kind of OPC UA requests.

The OPC UA Client API supports the following services:

Discovery:

- GetEndpoints
- FindServers
- FindServersOnNetwork

Session:

- CreateSession
- ActivateSession
- DeleteSession

View:

- Browse
- BrowserNext
- RegisterNodes
- UnregisterNodes
- TranslateBrowsePathsToNodeIds

Attribute:

- Read
- Write

Subscription:

- CreateSubscription
- ModifySubscription
- SetPublishing
- Publish (Handled by the Runtime itself)
- DeleteSubscription

#### MonitoredItems:

- The client is able to handle both types of monitored items (event and sampling). The only difference in handling is the callbacks that are called for both types.
- CreateMonitoredItems
- DeleteMonitoredItems
- ModifyMonitoredItems
- SetMonitoringMode

**Security:** The OPC UA client uses the existing security related runtime interfaces to handle the encryption algorithms and certificates. The client registers itself to the certificate store for easy configuration of the client certificates.

#### SecurityProfiles:

- None
- Basic256Sha256 (Sign, Sign\_and\_Encrypt)
- Aes128\_Sha256\_RsaOaep
- Aes256\_Sha256\_RsaPss

#### User token policy:

- Anonymous
- Username

An example demonstrating how to use the API is available in the CODESYS Store: ‘OPC UA Client Example’.

Additionally it is possible to connect the OPC UA Client to an OPC UA Server within the CODESYS IDE via the “Data Source Manager” object. OPC UA Servers can be added online or offline.

**Online:** Using the IP address the client connects to the server and detects the existing variables and types. The user can select the objects to be browsed.

**Offline:** Using an OPC UA information model file the client reads the variables and types from the information model. A connection to the server is not required.

Also see [CODESYS Online Help]([https://content.helpme-codesys.com/en/CODESYS%20Communication/\\_cds\\_obj\\_data\\_source\\_communication\\_opc\\_ua\\_server.html](https://content.helpme-codesys.com/en/CODESYS%20Communication/_cds_obj_data_source_communication_opc_ua_server.html)).

The CODESYS OPC UA Client supports the following profiles.

UA Features	Profiles	Link
Core	Core 2017 Client Facet	<a href="http://opcfoundation.org/UA-Profile/Client/Core2017">http://opcfoundation.org/UA-Profile/Client/ Core2017</a>
	Discovery Client Facet	<a href="http://opcfoundation.org/UA-Profile/Client/Discovery">http://opcfoundation.org/UA-Profile/Client/ Discovery</a>
	AddressSpace Lookup Client Facet	<a href="http://opcfoundation.org/UA-Profile/Client/AddressSpaceLookup">http://opcfoundation.org/UA-Profile/Client/ AddressSpaceLookup</a>

UA Features	Profiles	Link
	UA-TCP UA-SC UA-Binary	<a href="http://opcfoundation.org/UA-Profile/Transport/uatcp-uasc-uabinary">http://opcfoundation.org/UA-Profile/Transport/uatcp-uasc-uabinary</a>
Data Acess	Attribute Read Client Facet	<a href="http://opcfoundation.org/UA-Profile/Client/AttributeRead">http://opcfoundation.org/UA-Profile/Client/AttributeRead</a>
	Attribute Write Client Facet	<a href="http://opcfoundation.org/UA-Profile/Client/AttributeWrite">http://opcfoundation.org/UA-Profile/Client/AttributeWrite</a>
	DataChange Subscriber Client Facet	<a href="http://opcfoundation.org/UA-Profile/Client/DataChangeSubscriber">http://opcfoundation.org/UA-Profile/Client/DataChangeSubscriber</a>
Events	Event Subscriber Client Facet	<a href="http://opcfoundation.org/UA-Profile/Client/EventSubscriber">http://opcfoundation.org/UA-Profile/Client/EventSubscriber</a>
Methods	Method Client Facet	<a href="http://opcfoundation.org/UA-Profile/Client/Method">http://opcfoundation.org/UA-Profile/Client/Method</a>
Alarms&Conditions	A & C Base Condition Client Facet	<a href="http://opcfoundation.org/UA-Profile/Client/ACBaseCondition">http://opcfoundation.org/UA-Profile/Client/ACBaseCondition</a>
	A & C Refresh2 Client Facet	<a href="http://opcfoundation.org/UA-Profile/Client/ACRefresh2">http://opcfoundation.org/UA-Profile/Client/ACRefresh2</a>
	A & C Enable Client Facet	<a href="http://opcfoundation.org/UA-Profile/Client/ACEnable">http://opcfoundation.org/UA-Profile/Client/ACEnable</a>
	A & C Alarm Client Facet	<a href="http://opcfoundation.org/UA-Profile/Client/ACAlarm">http://opcfoundation.org/UA-Profile/Client/ACAlarm</a>
Historical Acess	not yet supported	
Redundancy	not yet supported	
Security	User Token – Anonymous Facet	<a href="http://opcfoundation.org/UA-Profile/Security/UserToken/Anonymous">http://opcfoundation.org/UA-Profile/Security/UserToken/Anonymous</a>
	User Token – User Name Password Client Facet	<a href="http://opcfoundation.org/UA-Profile/Security/UserToken/Client/UserNamePassword">http://opcfoundation.org/UA-Profile/Security/UserToken/Client/UserNamePassword</a>
	None	<a href="http://opcfoundation.org/UA/SecurityPolicy#None">http://opcfoundation.org/UA/SecurityPolicy#None</a>
	SecurityPolicy [B] – Basic256Sha256	<a href="http://opcfoundation.org/UA/SecurityPolicy#Basic256Sha256">http://opcfoundation.org/UA/SecurityPolicy#Basic256Sha256</a>
	Aes128-Sha256-RsaOaep	<a href="http://opcfoundation.org/UA/SecurityPolicy#Aes128_Sha256_RsaOaep">http://opcfoundation.org/UA/SecurityPolicy#Aes128_Sha256_RsaOaep</a>
	Aes256-Sha256-RsaPss	<a href="http://opcfoundation.org/UA/SecurityPolicy#Aes256_Sha256_RsaPss">http://opcfoundation.org/UA/SecurityPolicy#Aes256_Sha256_RsaPss</a>

•

## General information

### Supplier:

CODESYS GmbH  
Memminger Strasse 151  
87439 Kempten  
Germany

### Support:

Technical support is not included with this product. To receive technical support, please purchase a CODESYS Support Ticket.

<https://support.codesys.com>

### Item:

CODESYS OPC UA Client SL

### Item number:

2302000042

### Sales / Source of supply:

CODESYS Store

<https://store.codesys.com>

### Included in delivery:

- License key
- License agreement

## System requirements and restrictions

<b>Programming System</b>	CODESYS Development System V3.5.17.0 or higher
<b>Runtime System</b>	CODESYS Control V3.5.17.0 or higher
<b>Supported Platforms/ Devices</b>	CODESYS SoftPLC systems
	Note: Use the tool "Device Reader" to find out the supported features of your device (free of charge component of CODESYS Development System).
<b>Additional Requirements</b>	-
<b>Restrictions</b>	-
<b>Licensing</b>	



Single Device License: The license can be used on the target device/PLC on which the CODESYS Runtime System is installed.

Licenses are activated on a software-based license container (soft container), which is permanently connected to the controller. Alternatively the license can be stored on a CODESYS Key (USB-Dongle). By replugging the CODESYS Key, the license can be used on any other controller.

Note: In demo mode, the software runs for two hours without a license. After that, a manual restart is required.

<b>Required Accessories</b>	Optional: CODESYS Key
-----------------------------	-----------------------

*Note: Technical specifications are subject to change. Errors and omissions excepted. The content of the current online version of this document applies.*

Creation date: 2023-05-04