

IEC 60870-5-104 Server

The Telecontrol package contains an IEC 60870-5-104 server that can be fully activated with this license. Without purchasing a license, the IEC 60870-5-104 server SL runs for 30 minutes without any functional restrictions (demo mode).

Product description

The Telecontrol package allows to use the CODESYS PLC as IEC 60870-5-104 server. All relevant features of the IEC 60870-5-104 protocol are implemented:

- See the interoperability list below
- Library written in IEC61131-3
- Configurator as CODESYS PlugIn

Range of Functions

- Support of information objects of this following groups:
 - Monitoring direction: SP, DP, ST, BO, ME, IT
 - Control direction: SC, DC, RC, SE, BO
 For protocoll detailed functionality, see the interoperability list.
- Telecontrol configurator properties

	Start Add objects				
Import/Export	Reset Import Export Sort Advanced Import Exectings				
	Project CSV Import	/Export Informations			
	IEC 60870-5 Server	Settings			
	Link Layer	General object settings			
Project tree, grouped by	[00001] Station address (ASDU)	Туре	Object 34 (IObj34M_ME_T	-	
information objects	4 [01][Group] SP	Comment			
	[1] [Ti30] [0. = 1] Single-point information Image: Triangle of the second se	Object address	0 🗘 0	1 🛟	
	 [TI31] [0.0.1 = 1] Double-point information [00][Group] ST 	Status and event informat	tion		
	[00][Group] BO	Interrogation identifier	Global [QOI 20]	Retentive parameter	15
	 [03][Group] ME 	Deadband absolute	✓ 10 ⁺	Deadband integr	10 ‡
Object properties	[TI34] [0.0.1 = 1] Measured value	NVA (Normalized value)	1	reverse mode	0 -
	TI35] [0.0.2 = 2] Measured value				
	[TI36] [0.0.3 = 3] Measured value	Quality information			
	[00][Group] IT	BL	1	SB	1
	[00][Group] SC	NT	1	IV	I .
	[00][Group] DC	ov	I -		
	[00][Group] RC	CP56Time2a			
	[00][Group] SE				
	[00][Group] BO				

Note

Check the licensing options of your controller with the free CODESYS Device Reader.

Backmann	CODESYS Device Reader	the second designed in the second designed in the second designed in the second designed in the second designed		
Support of CODESYS Dongle or Softcontainer required Ease		Targetvisu		
Support of CODESYS Dongle or Softcontainer required 0 <		and the second se		
Baric Baric Baric Baric Baric CO193 Start CO193 Start				terrore and terror
Support of CODESYS Dongle or Softcontainer required				
Support of CODESYS Dongle or Softcontainer required				
Support of CODESYS Dongle or Softcontainer required			and the second se	Market
Pupport of CODESYS Dongle or Softcontainer required			and a state of the	
Support of CODESYS Dongle or Softcontainer required				
upport of CODESYS Dongle or Softcontainer required				
Support of CODESYS Dongle or Softcontainer required				10.00
upport of CODESYS Dongle or Softcontainer required				
upport of CODESYS Dongle or Softcontainer required				
upport of CODESYS Dongle or Softcontainer required				Print Die Schalte (position)
support of CODESYS Dongle or Softcontainer required				
Support of CODESYS Dongle or Softcontainer required				
support of CODESYS Dongle or Softcontainer required				
Support of CODESYS Dongle or Softcontainer required				
Master Dongle	Support of CODESYS Dongle or Softcontainer required		and the second se	
	apport of COBECTO Bongie of Contechtaniel required			
		Slave		

Manufacturer

3S-Systems GmbH Marienweg 4a 31542 Bad Nenndorf Germany

Manufacturer support

support@3s-systems.com

General information

Supplier:

CODESYS GmbH Memminger Strasse 151 87439 Kempten Germany

Support:

https://support.codesys.com

Item: IEC 60870-5-104 Server Item number: 2312000014 Sales: CODESYS Store https://store.codesys.com

Included in delivery:

• License Key

System requirements and restrictions

Programming System	CODESYS Development System V3.5.16.0
Target System	CODESYS Control V3.5.16.0
Supported Platforms / Devices	CODESYS Runtime SL Systems
	Notice: Use the project 'Device Reader' to find out the
	supported features of your device. 'Device Reader' is
	available for free in the CODESYS Store.
Additional Requirements	none
Restrictions	none
Licensing	Single Device License: The license can be used on
	the target device/PLC on which the CODESYS
	Runtime System SL is installed.
	Licenses are activated on a software-based license container (soft container), which is permanently connected to the controller.
	Alternatively, the license can be stored on a CODESYS Key (USB-Dongle). By replugging the CODESYS Key, the license can be used on any other controller.
	Note: In demo mode, the software runs half an hour without a license. After that, the server will be stopped.
Required Accessory	CODESYS Runtime Key or SoftContainer

Note: Not all CODESYS features are available in all territories. For more information on geographic restrictions, please contact sales@codesys.com.

Note: Technical specifications are subject to change. Errors and omissions excepted. The content of the current online version of this document applies.