



Data Sheet CODESYS Safety (for EtherCAT Safety Modules) SL

CODESYS extension for EtherCAT based safety solutions with TwinSAFE logic modules EL6900, EL6910 and EK1960 from Beckhoff under a CODESYS controller with CODESYS EtherCAT Master stack.

Product description

The TÜV certified product allows to extend any CODESYS project with an EtherCAT controller with CODESYS EtherCAT Master stack for the development of safety functions with TÜV certified safety logic modules by Beckhoff and digital FSoE I/O modules and analog TSC input modules in the EtherCAT network. The extension with safety-specific editors and configurators is integrated seamlessly into the CODESYS Development System and the CODESYS EtherCAT configurator. It enables cost effective and scalable realization of simple safety applications with zero system integration or adaptation effort and low acceptance expenditure. The product is aimed at users and at device manufacturers who do not intend to develop their own safety controller and require only limited safety functionality.


- **Safety level** up to PL-e according to DIN EN ISO 13849 and up to SIL3 according to IEC 62061/61508, depending on input and output devices and programmed logic.
- **Simplified acceptance** by Limited Variability Programming (LVL) according to ISO 13849 and IEC 62061.
- **Logic modules:** EL6900 or EL6910 as EtherCAT camp (TwinSAFE-Logic), or EK1960 as EtherCAT coupler (TwinSAFE-Compact Controller) by Beckhoff, or EL1918, EL2912, EL2911
- **Digital SIL3 I/O-modules:** FSoE modules (Failsafe over EtherCAT) by any manufacturer installed from EtherCAT description files.
- **Analog SIL2 input modules:** 10 TSC modules (TwinSAFE SingleChannel) by Beckhoff: EL3124-0090, EL3174-0090 (differential), EL3214-0090 (for resistance sensors), EL3314-0090 (for thermal element), EL3356-0090 (for weight cell/resistance bridge); and encoders/givers EL5001-0090 (SSI), EL5021-0090 (Sin/Cos), EL5032-0090 (EnDat2.2), EL5101-0090 (incremental differential RS422), EL5151-0090 (incremental)

Operation functions and fieldbus configuration on the standard controller can be changed without impact on the safety functions of the safety logic module.

- **Standard signals** can be exchanged with the EtherCAT controller: standard input signals for comparison with TSC values, signals from/to the standard application.
- **Multiple** safety logic modules within an EtherCAT network are possible.
- **Groups:** Monitoring of multiple safety areas by one safety logic module supported by dividing the safety application into "groups" of I/O modules with related logic in an IEC

61131-3 POU in FBD language. Each group is started, stopped, diagnosed and error acknowledged separately by the standard application.


- **Optional devices:** If a safety area is not present in the machine, EL6910 and EK1960 allow to deactivate the corresponding group by online command without changing the application (permanently, temporarily, passivated).

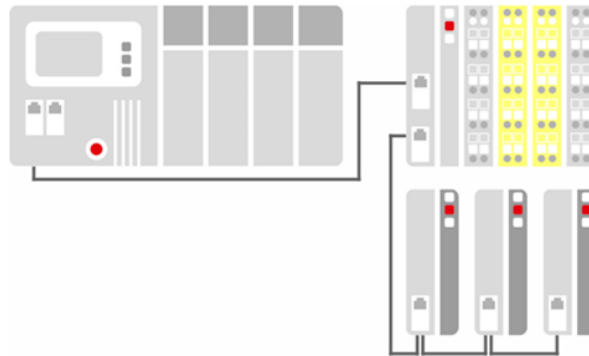

Picture 1: System structure with CODESYS EtherCAT controller (top left), EtherCAT Safety logic and I/O modules (top right), other EtherCAT modules (bottom right)

Configuration and programming directly in CODESYS

- Devices: Safety logic modules and safety I/O modules (FSoE and TSC) are added in the EtherCAT device tree

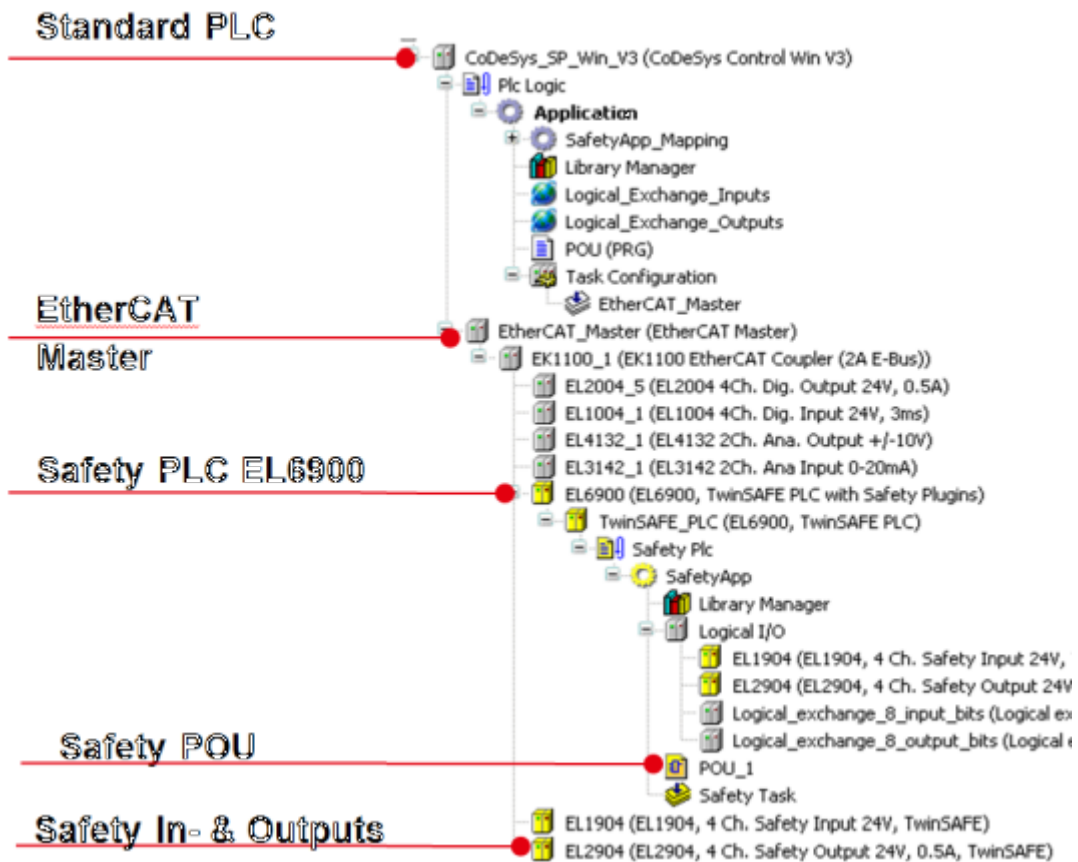

- Exchange: Variables exchanged between safety and standard are defined in special list objects

- Groups: Each safety POU together with the used I/O modules represents a group; group status flags mappable to exchanged variables; defining the allowed group deactivation methods (EL6910/EK1960 only)
- Safe versioning: version identifications and CRCs for safety application and each POU and device shown in application editor (“pinning”)

Safety Configurator for I/O Modules


- FSoE parameters

Protocol parameters Mapping Information			
In work			
Parameter Name	Value	Symbolic value	P.
FSoE address	2		
WatchdogTime	100		
Operating Mode	0	digital	
Sensor test Channel 1 active	1	Active	
Sensor test Channel 2 active	1	Active	
Sensor test Channel 3 active	1	Active	
Sensor test Channel 4 active	1	Active	
Logic of Channel 1 and 2	0	single logic channel 1/2	
Logic of Channel 3 and 4	0	single logic channel 3/4	

- Application-related module parameters
- Symbolic mapping of I/O points

Safety FBD Editor for Group Logic

- Restricted IEC 61131-3 Function Block Diagram (FBD)

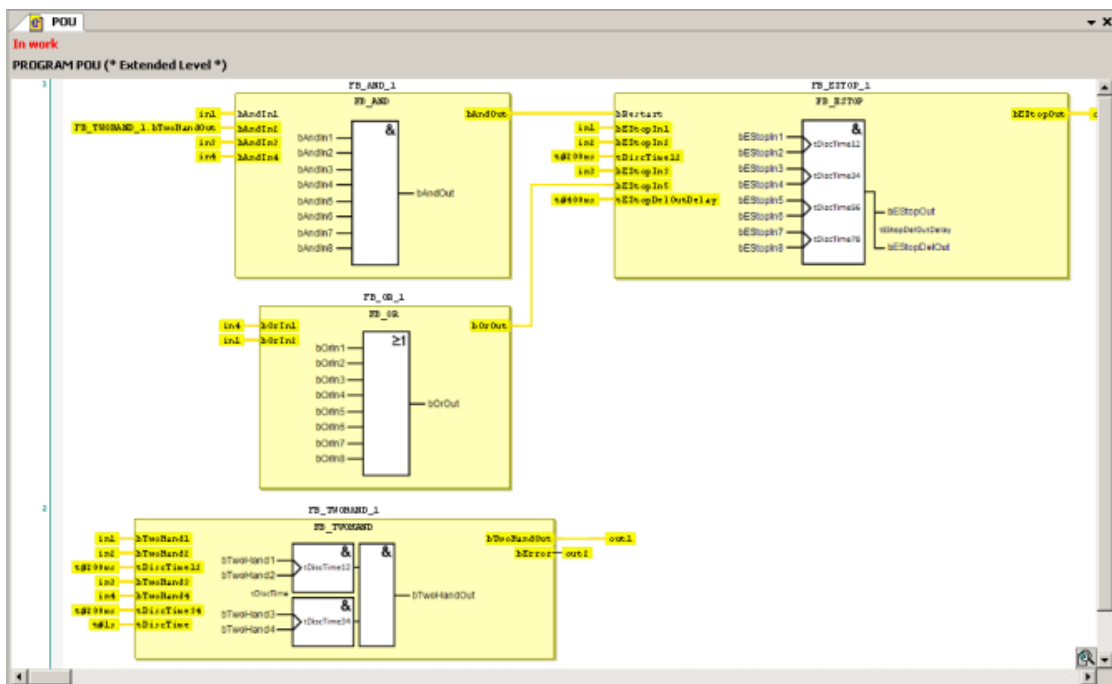


- Interconnection of predefined certified safety-related function blocks (see further below), physical inputs and outputs, and variables exchanged with the EtherCAT controller

- High-lighting of safety-related data flows
- EL6910/EK1906: Definition of replacement values for the case the group gets deactivated

Online

- Online monitoring in the safety FBD editor

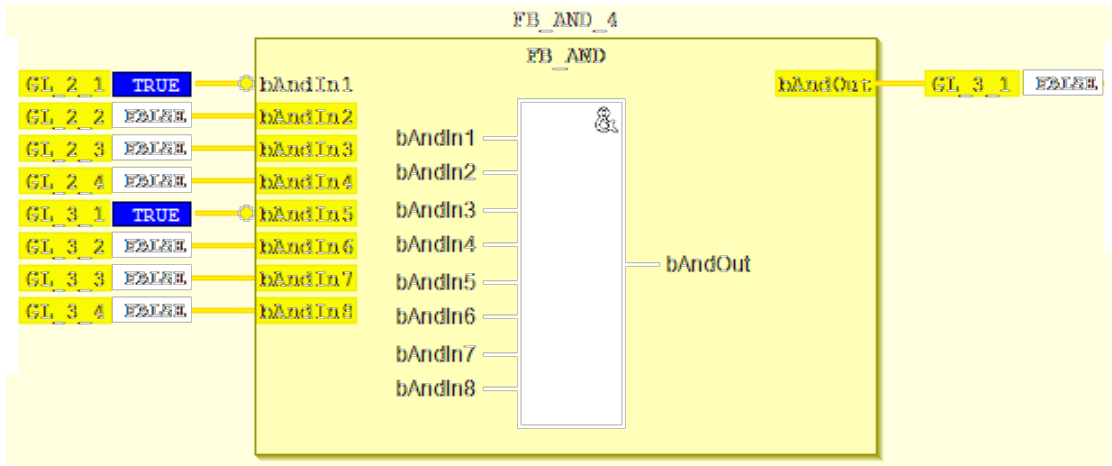

- Status of groups in the CODESYS project navigator
- Diagnostic messages from the safety logic module
- Configuration of the on-board user management
- Activation status and deactivation of groups

Activation status of groups in device

POU (Group)	Activation	Permanent deactivation	Temporary deactivation	Passivation
Safety_PRG_01 (1)	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>
POU (2)	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
POU_1 (3)	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
POU_2 (4)	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
POU_3 (5)	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

OK Cancel

- Module replacement supported: replaced logic module loads safety application from standard controller

Predefined Safety Function Blocks

CODESYS libraries describe the certified safety function blocks for factory safety which are predefined in the safety logic modules for using them in the FBD editor.

safety monitoring functions		other functions	
FB_ESTOP, FB_TWOHAND, FB_MODE, FB_MON	monitoring safety controls: emergency stop button, two hand control, operation mode selector, safety door	FB_AND, FB_OR, FB_TON, FB_TOF, FB_RS, FB_SR	standard function blocks I (digital)
FB_MUTING	monitoring a muting sequence	FB_CS	deactivate connection to FSoE module (connection shutdown)
FB_EDM	monitoring a safety switch		
<i>additional function blocks only in EL6910 and EK1960:</i>			
FB_SLI, FB_ENVELOPE, FB_LOADSENSING	monitoring a position: against deviation range; against envelope; against stepped area	FB_ADD, FB_SUB, FB_MUL, FB_DIV, FB_COUNTER	standard function blocks II (analog)
FB_CAMMONITOR FB_LIMIT, FB_VIOLATIONCNT	monitoring a cam Detect limit violations; weighted error counter	FB_COMPARE, FB_SCALING, FB_SPEED	Comparison of a TSC value with 1 to 4 standard values for SIL2 use; scaling of an analog value; speed from position

General information

Supplier:

CODESYS GmbH
 Memminger Strasse 151
 87439 Kempten
 Germany

Support:

Technical support is not included with this product. To receive technical support, please purchase a CODESYS Support Ticket.

<https://support.codesys.com>

Item:

CODESYS Safety (for EtherCAT Safety Modules) SL

Item number:

2306000000

Sales/Source of supply:

CODESYS Store
<https://store.codesys.com>

Included in delivery:


Package for the CODESYS Development System including

- device descriptions for EL6900, EL6910, EK1960, 10 TSC modules
- library of predefined safety function blocks
- library for the standard controller for I/O routing
- safety FBD editor, configurator, etc.
- safety manual

License key

System requirements and restrictions

Programming System	CODESYS V3.5 SP16 Patch 3 (64 bit, 32 bit), or a version listed in column "Compatibility" under "All versions" Do not use together with GIT or SVN.
Programming Platform	Windows 10 (64 bit) The versions maintained by Microsoft are supported.

Runtime System	CODESYS Control V3.5 SP4 (or higher)
Additional Requirements	License for CODESYS EtherCAT Master on the controller
Supported Devices	<ul style="list-style-type: none"> • 3 logic modules: EL6900, EL6910, EK1960 (Beckhoff TwinSAFE-Logic, TwinSAFE-Compact Controller) • logic modules as FSoE I/O-modules: EK1960, EL1918, EL2912, EL2911 • installed FSoE I/O-modules (no SRA-parameters or preconfigured) • 10 analog TSC input modules: EL3124-0090, EL3174-0090, EL3214-0090, EL3314-0090, EL3356-0090, EL5001-0090, EL5021-0090, EL5032-0090, EL5101-0090, EL5151-0090 (Beckhoff TwinSAFE SingleChannel) <p>Note: Use the project “Device Reader” to find out the supported features of your device. “Device Reader” is available for free in the CODESYS Store.</p>
Restrictions	No configuration of SRA-parameters; no installation of further TSC modules from description files; no PROFIsafe support
Licensing	<div style="text-align: center;">  </div> <p>Single device license: The license can be used on the target device/PLC on which the CODESYS runtime system is installed.</p> <p>Licenses are activated on a software-based license container (soft container), which is permanently connected to the controller. Alternatively, the license can be stored on a CODESYS Key (USB dongle). By replugging the CODESYS Key, the license can be used on any other controller.</p> <p>Note: In demo mode, the software runs for two hours without a license. SAFE STATE WILL BE ENTERED AFTER EXPIRY OF TWO HOURS!</p>
Required Accessories	Optional: CODESYS Key

Note: Technical specifications are subject to change. Errors and omissions excepted. The content of the current online version of this document applies.

Creation date: 2024-08-01